

Solid-State Digital Counter

H7AN

Preset and Totalizing Counters with Up to 8-Digit LED Displays

- Draw-out construction allows setting, servicing without disconnecting wiring
- Choose from selectable UP/DOWN or reversible counting
- Large, easy-to-read 8 mm (0.3 in) LED displays — choose 2, 4, 6 or 8 digits
- Contact and solid-state outputs available
- Sustained and adjustable one-shot outputs
- Built-in DC power supply for input devices
- 10-year lithium battery memory backup available
- Panel mounting hardware included



Ordering Information

Add the supply voltage to the part number when you order. For example, **H7AN-4DM-AC100-240**.

■ PRESET COUNTERS

Counting method		UP or DOWN (selectable)		Reversible		UP/DOWN and Reversible		
Memory backup		Not provided	Provided	Not provided	Provided	Not provided	Provided	
Part number	2 digits	Single preset	H7AN-2D	H7AN-2DM	H7AN-E2D	H7AN-E2DM	—	—
		Double preset	H7AN-W4D	H7AN-W4DM	H7AN-WE4D	H7AN-WE4DM	—	—
	4 digits	Single preset	H7AN-4D	H7AN-4DM	H7AN-E4D	H7AN-E4DM	—	—
		Double preset	H7AN-W4D	H7AN-W4DM	H7AN-WE4D	H7AN-WE4DM	—	—
	6 digits	Single preset	—	—	—	—	H7AN-R6D	H7AN-R6DM
		Double preset	—	—	—	—	H7AN-RW6D	H7AN-RW6DM
8 digits	Single preset	—	—	—	—	H7AN-R8D	H7AN-R8DM	
Supply voltages	AC	24 V or 100 to 240 V, 50/60 Hz						
	DC	12 to 24 V, 48 V or 100 V						

■ TOTALIZING COUNTERS

Counting method		UP or DOWN (selectable)		Reversible		UP/DOWN and Reversible	
Memory backup		Not provided	Provided	Not provided	Provided	Not provided	Provided
Part number	4 digits	H7AN-T4	H7AN-T4M	H7AN-ET4	H7AN-ET4M	—	—
	6 digits	—	—	—	—	H7AN-RT6	H7AN-RT6M
	8 digits	—	—	—	—	H7AN-RT8	H7AN-RT8M
Supply voltages	AC	24 V or 100 to 240 V, 50/60 Hz					
	DC	12 to 24 V, 48 V or 100 V					

■ REPLACEMENT PARTS

Description	Part number
Plastic front cover	H5AN COVER 033762-0
Mounting bracket (one pair supplied with each timer); order two	Y92H-5

Specifications

■ GENERAL CAPABILITIES

Model	H7AN	H7AN-T	
Classification	Preset counter	Totalizing counter	
Mounting	Panel mounting; two mounting brackets included		
External connections	Back-mounted screw terminals		
Output modes	2 sustained, 5 one-shot output modes N, F, C, R, K, P, and Q; DIP switch selected	—	
Input modes	UP or DOWN (DIP switch selectable) for 2- and 4-digit models (H7AN-□□) Reversible for 2- and 4-digit models (H7AN-E□□) UP/DOWN and Reversible for 6- and 8-digit models (H7ANR□□) 6 Reversible modes include: Mode A (command inputs L→H), Mode B (individual inputs L→H), Mode C (phase difference inputs L→H), Mode D (command inputs H→L), Mode E (individual inputs H→L) and Mode F (phase difference inputs H→L)		
Reset system	Power-OFF reset (except those with memory protection, H7AN-M) Minimum power-OFF time: 0.5 second Reset time following power application: 0.05 second		
	External and manual reset Reset time: 0.02 second		
Sensor power supply	12 VDC, 80 mA ±10% (5% max. ripple)		
Input signal	Count and reset		
Input method	No-voltage input, by short-circuiting or opening contacts Solid-state logic voltage		
Control outputs	Single preset	One SPDT contact and one solid-state open collector output	No outputs
	Double preset	Two SPST-NO contacts and two solid-state open collector outputs	
Displays	7-segment LED count value display, 8 mm (0.3 in) high characters, and LED indicators for count up and reset		
Digits	2, 4, 6, or 8 digits	4, 6, or 8 digits	
Memory backup	H7AN-M models have a 3-volt lithium battery that provides 10 years of memory retention at 20°C (68°F)		

■ OUTPUT MODES SUMMARY

Preset counters have outputs; totalizing counters H7AN-T do not have outputs.

Output mode	Description		Applicable counters
	Single preset counter	Double preset counter	
N	Sustained output	Sustained output 2, selectable sustained or one-shot output 1	H7AN preset counters only
F	Sustained output, overrun display	Sustained output 2, selectable sustained or one-shot output 1	
C	One-shot output	One-shot output 2, selectable one-shot or sustained output 1	
R	One-shot output, overrun display	One-shot output 2, selectable one-shot or sustained output 1	
K	One-shot output	One-shot output 2, selectable one-shot or sustained output 1	
P	One-shot output	One-shot output 2, selectable one-shot or sustained output 1	
Q	One-shot output, overrun display	One-shot output 2, selectable one-shot or sustained output 1	

One-shot period is adjustable from 0.1 to 1.0 second using a front-panel potentiometer.

■ RATINGS

Supply voltage	24 VAC or 100 to 240 VAC, 50/60 Hz 12 to 24 VDC, 48 VDC or 100 VDC (20% max. ripple)	
Operating voltage range	85 to 100% of rated voltage	
Power consumption	Approx. 10 VA at 240 VAC, 50 Hz; 5 W at 24 VDC Inrush current is 10 times greater than current during normal operation	
Max. counting speeds (CP1, CP2)	See separate table	
One-shot output	Adjustable, 0.1 to 1.0 second for single preset counters Output 1 fixed at 0.5 sec, Output 2 adjustable, 0.1 to 1.0 sec for double preset counters	
Count and reset inputs	No-voltage contact inputs: Continuity between terminals 9, 10, 11 and 12 Solid-state inputs: High +4.5 to +30 VDC; Low 0 to +2 VDC	
Control outputs	Contact	3 A, 250 VAC resistive load (p.f. = 1)
	Solid-state	Open collector, 100 mA, 30 VDC max.

■ MAXIMUM COUNTING SPEEDS

The maximum counting speeds depend on the number of digits on the counter and the operation mode selected.

Counter digits		2	4	6	8
Operation mode		All	N, F, R, K, Q	C, P	All
Input type	Command	30 cps	5 kcps	3 kcps	5 kcps
	Individual	30 cps	5 kcps	3 kcps	5 kcps
	Phase difference	30 cps	3 kcps	3 kcps	5 kcps

Note: To select another mode than the present one, select the mode with the internal selector and reset the counter with the external reset signal, power reset or manual reset switch. The counter also can be reset by turning power OFF. Mode selection is not possible with the automatic reset. The selected mode is effective only after the counter is reset.

■ MINIMUM PULSE WIDTHS

To ensure proper operation, be certain the input pulse width is of sufficient duration for the counting speed. For H7AN, the ON/OFF ratio is 1:1.

Counting speed	Pulse width
30 cps	16.70 ms
3 kcps	.17 ms
5 kcps	.10 ms

■ CHARACTERISTICS

Ambient operating temperature		-10° to 55°C (14° to 131°F) with no icing
Storage temperature		-25° to 65°C (-13° to 149°F) with no icing
Ambient operating humidity		35 to 85% RH
Insulation resistance		100 MΩ min. at 500 VDC between current-carrying terminals and external non-current-carrying metals parts, and between non-continuous contacts.
Dielectric strength		2,000 VAC, 50/60 Hz for 1 minute between current-carrying terminals and non-current-carrying metal parts 750 VAC, 50/60 Hz for 1 minute between non-continuous parts
Vibration	Mechanical durability	10 to 55 Hz, 0.75 mm (0.03 in) double amplitude
	Malfunction durability	10 to 55 Hz, 0.5 mm (0.02 in) double amplitude
Shock	Mechanical durability	Approx. 30 G
	Malfunction durability	Approx. 10 G
Service life	Mechanical	10 million operations minimum
	Electrical	100,000 operations minimum at 3 A, 250 VAC with motor load (p.f. = 1)
Weight		Approx. 360 g (12.7 oz.)


Approved by the following standards

- UL
- CSA
- SEV


Engineering Data

■ ELECTRICAL SERVICE LIFE

Motor Load

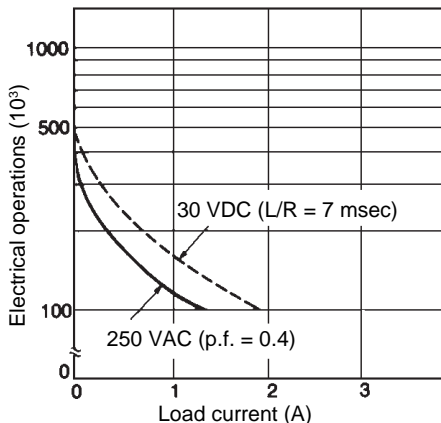

Resistive Load

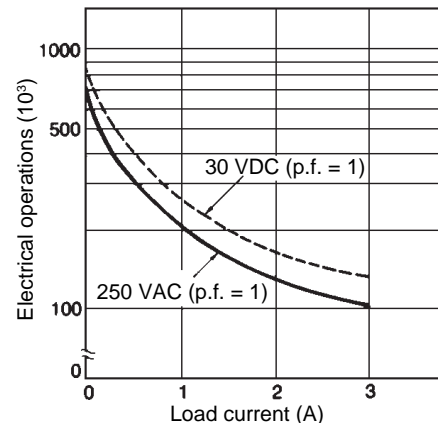

Timing Charts


INPUT FUNCTIONS

UP and DOWN Counters

Preset and totaling counters have DIP switch selectable counting direction. The graphs below show gate input for count interruption.


The following timing charts combine operations of both single preset and double preset counters. For single preset counters, refer to the 2nd control output.

"A" shows the count input minimum pulse width. If the count input is less than minimum pulse width, a miscount occurs and the count total will be ± 1 count.

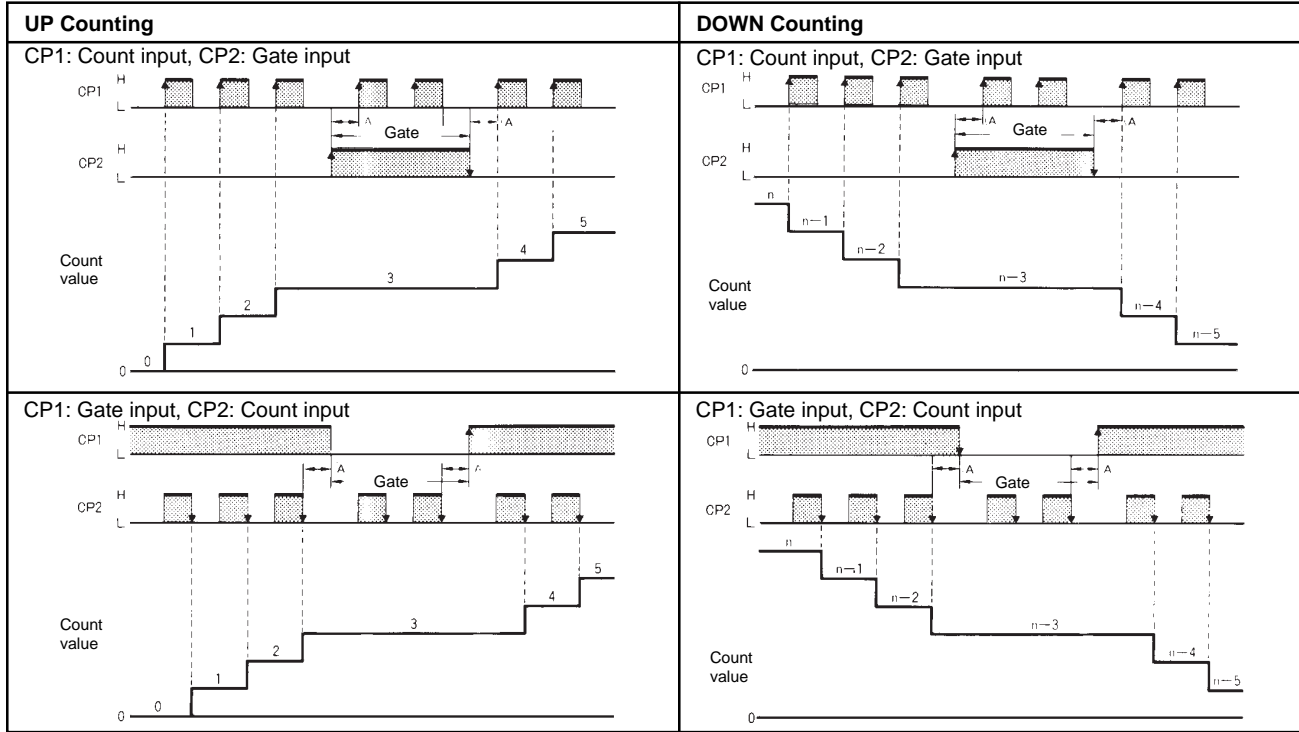


Reversible Counters

"A" shows the count input minimum pulse width. "B" must be greater than or equal to half the signal or a miscount will occur. In modes C and F, maximum input frequency should equal to CP1 + CP2.

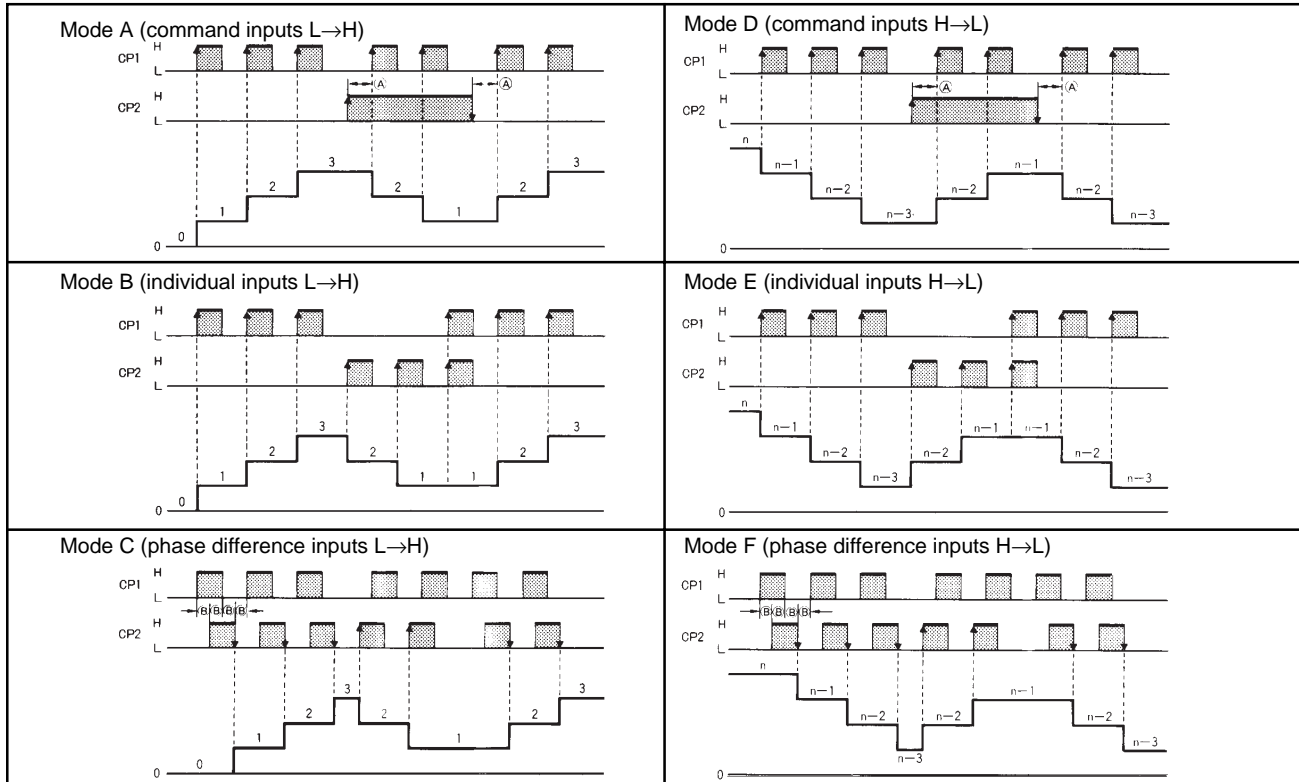

■ OUTPUT FUNCTIONS

Single Preset Counters

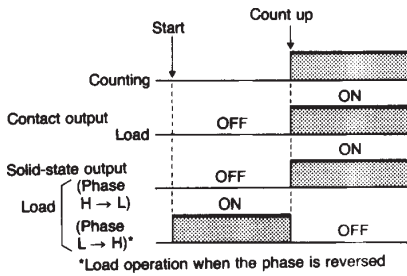

Double Preset Counters


Allow a constant of 5 ms for internal circuitry to complete setting of preset 1 before setting of preset 2 (see table).

Count speed	Minimum counts required between preset 1 and preset 2 by internal circuitry
30 cps	1 count
3 kcps	15 counts
5 kcps	25 counts

When used as an UP counter:
 $n - m \geq 5F$
 Note that $m \neq n$.

When used as a DOWN counter:
 $m \geq 5F$
 Note that $m \neq 0$.

m = preset value 1
 n = preset value 2
 F = count speed

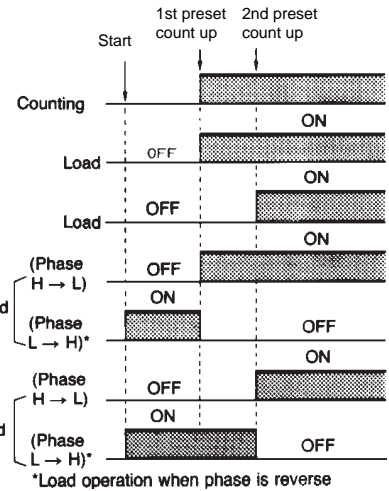


Seven Output Modes for Preset Counters

Modes are selected by internal DIP switch. Refer to "Operation" section and the specific model for details.



In modes C, K, P and Q, do not use the counter so that the count may be up during the one-shot output.

In mode C, the count-up value is not displayed because the internal counting circuit resets as soon as the count is up.

Bold line represents present value; Output 2 operation applies for single-preset models.

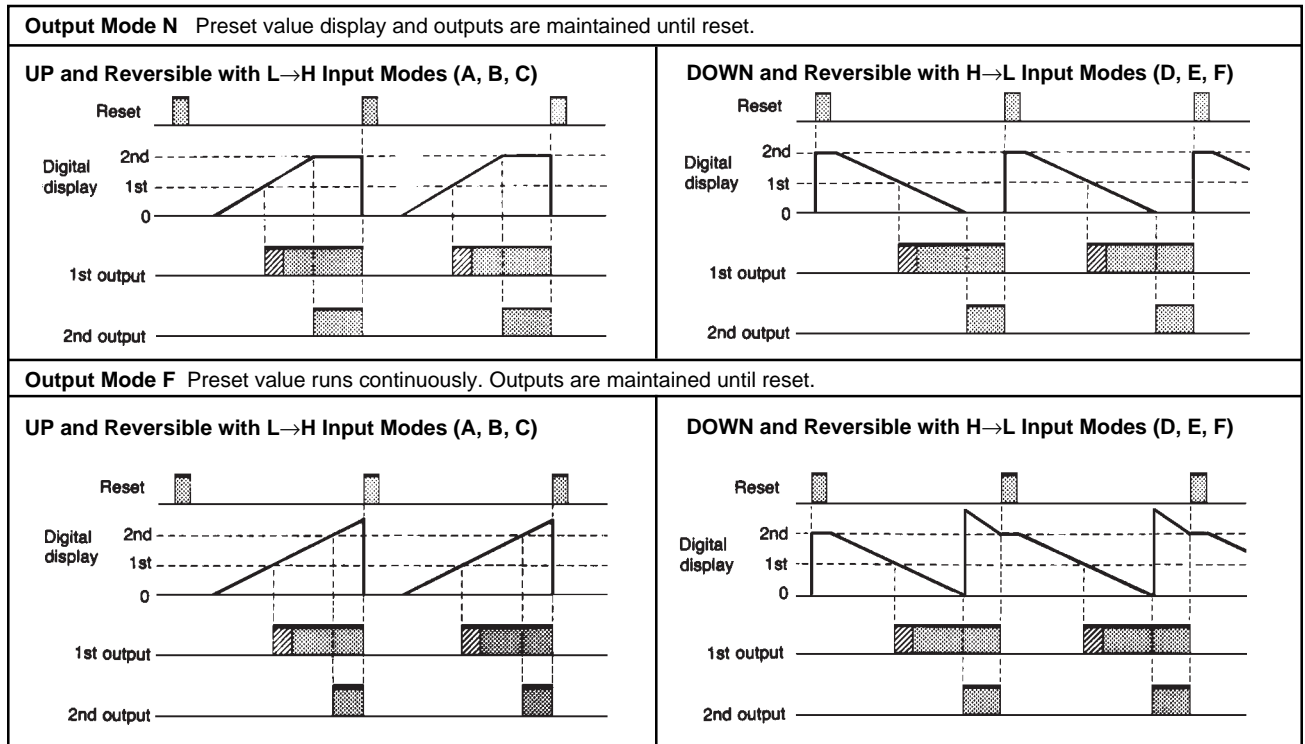

One-shot output 1 in double preset counters is fixed at 0.5 second




One-shot output in single preset counters and 2nd output in double preset counters is adjustable from 0.1 to 1.0 second.

Counter Output Operation (Continued)


(Bold line represents present value; Output 2 operation applies for single-preset models.)

Output Mode C Preset value is placed in reset start status as soon as preset count is reached; the preset is not actually displayed. Outputs are one-shot and operate repeatedly. Output 1 latches ON, and goes OFF after expiration of the one-shot period for Output 2. One-shot time periods for Output 1 and 2 are independent.

UP and Reversible with L→H Input Modes (A, B, C)

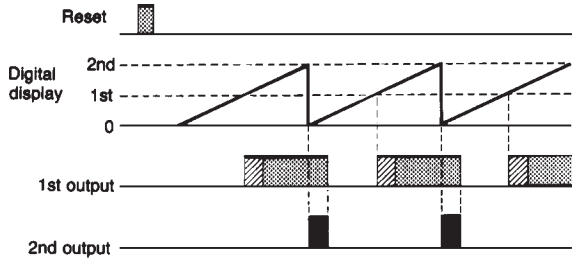


DOWN and Reversible with H→L Input Modes (D, E, F)

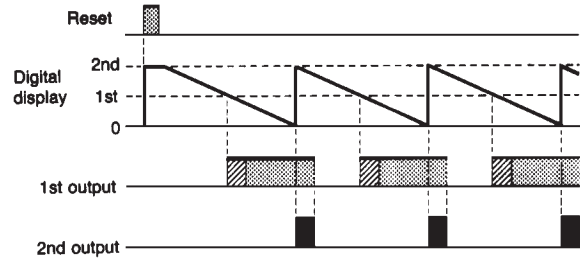


Output Mode R Present value display returns to reset start status after expiration of one-shot time period. Outputs are one-shot and operate repeatedly. Output 1 latches ON at preset 1, and goes OFF after expiration of the one-shot period for Output 2. One-shot time periods for Output 1 and 2 are independent.

UP and Reversible with L→H Input Modes (A, B, C)

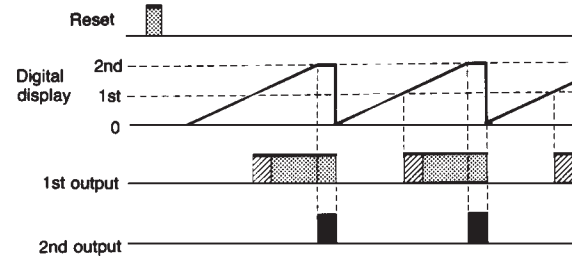


DOWN and Reversible with H→L Input Modes (D, E, F)

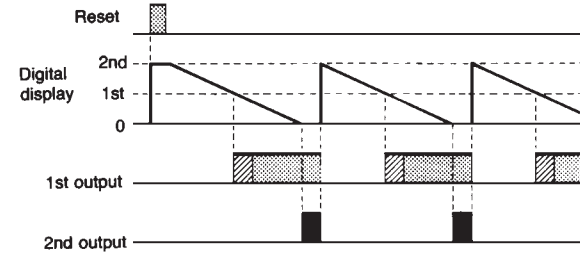


Output Mode K Present value runs continuously. Output 1 latches ON at preset 1, and goes OFF after expiration of the one-shot period for Output 2. One-shot time periods for Output 1 and 2 are independent.

UP and Reversible with L→H Input Modes (A, B, C)

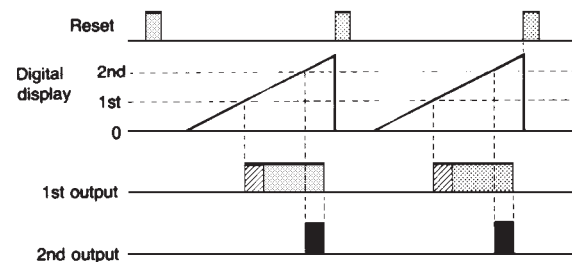


DOWN and Reversible with H→L Input Modes (D, E, F)

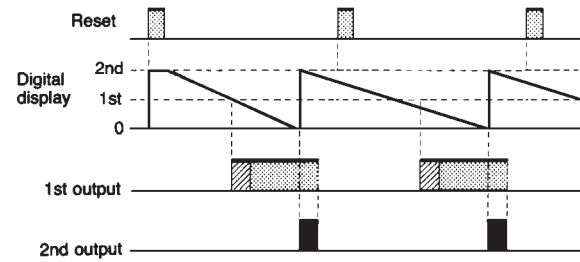


Output Mode P Present value display does not change during one-shot time period, but reset start status returns as soon as preset count is reached. Outputs are one-shot and operate repeatedly. Output 1 latches ON at preset 1, and goes OFF after expiration of the one-shot period for Output 2. One-shot time periods for Output 1 and 2 are independent.



UP and Reversible with L→H Input Modes (A, B, C)

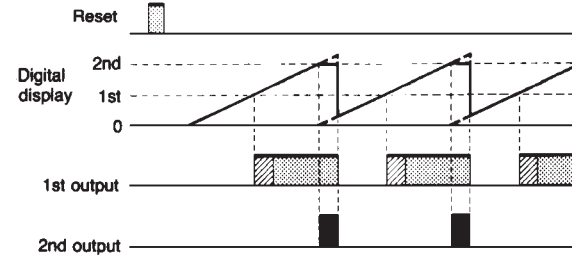

DOWN and Reversible with H→L Input Modes (D, E, F)

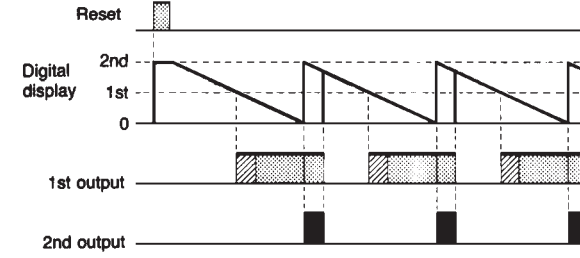



One-shot output 1 in double preset counters is fixed at 0.5 second



One-shot output in single preset counters and 2nd output in double preset counters is adjustable from 0.1 to 1.0 second.



Counter Output Operation (Continued)

(Bold line represents present value; Output 2 operation applies for single-preset models.)

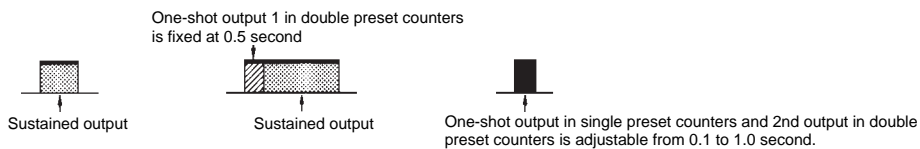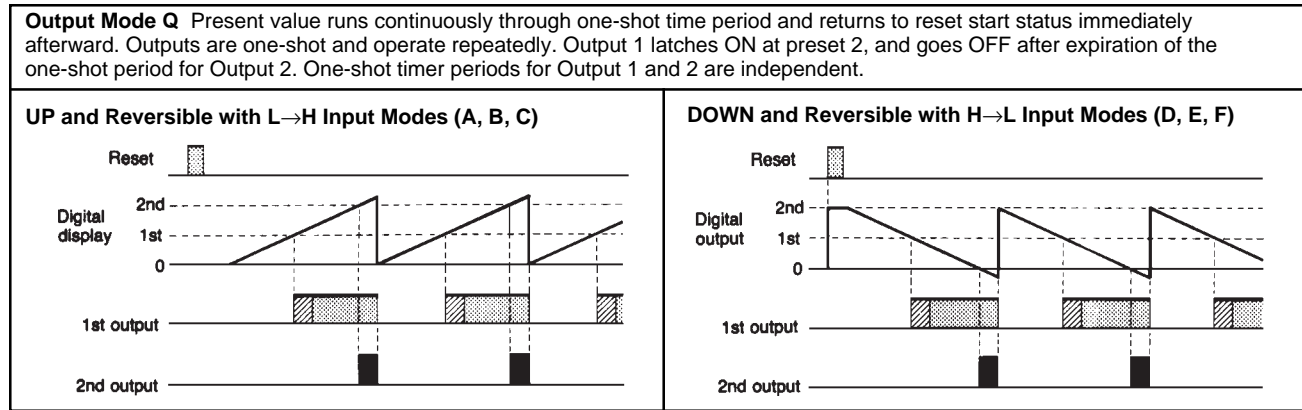


Dimensions


Unit: mm (inch)

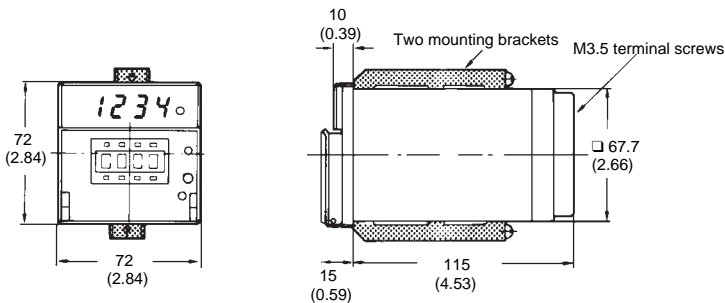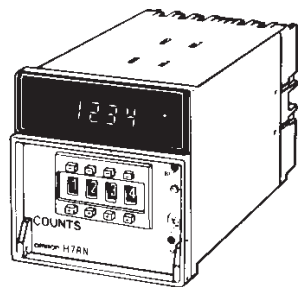

Panel cutouts

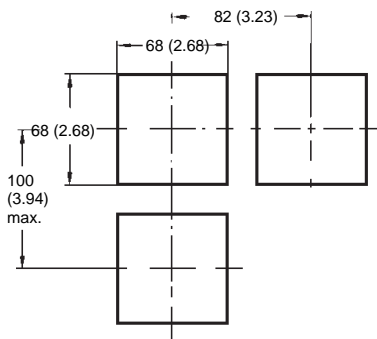

For side-by-side mounting of two units

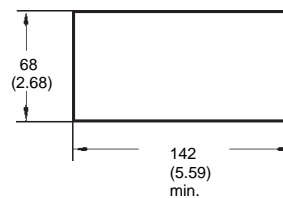

Note:
Panel cutout conforms to DIN 43700.
Recommended panel thickness is 1 to 5 mm (0.039 to 0.197 in).

Connections

Input terminal number (no voltage only)

COM	Reset	CP2	CP1
8	9	10	11

Power supply terminal numbers

AC (common), DC-	AC (hot), DC+	Ground
1	2	3

Power supply for externally connected equipment

Voltage supply	DC-	DC+
12 VDC, 80 mA	8	12

Note: Totalizing counters do not have outputs.


Output terminal numbers, single preset counter

Contact		
COM	NO	NC
4	5	6
Solid-state		
COM	Load	Surge absorber
8	13	14


Output terminal numbers, double preset counter

Contact		
Out 2	Out 1	
4 and 5	6 and 7	
Solid-state		
COM	Out 2	Out 1
8	13	14


Single preset H7AN counters

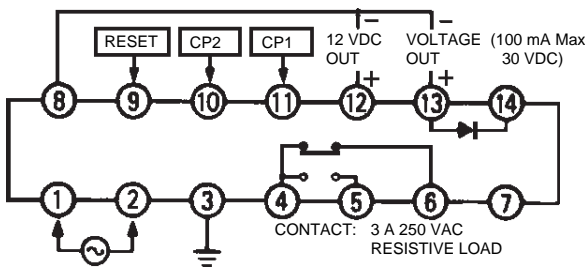


Double preset H7AN counters

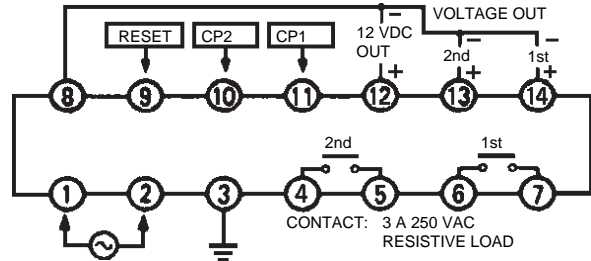


Single preset counters

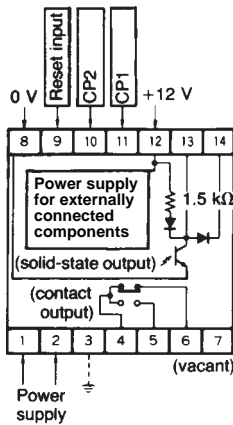

Double preset counters

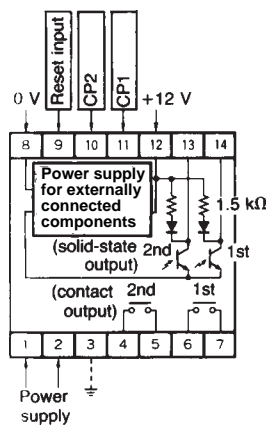

Totalizing counters

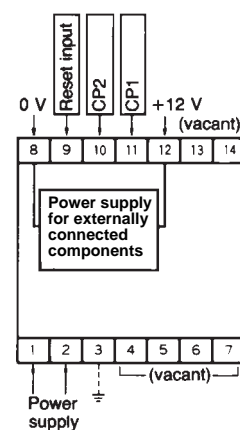

Note:


Do not use the vacant terminals for any purpose.

Ground terminal 3 at a resistance of less than 100 Ω when the counter is used in an environment with high levels of external noise.

■ COUNT AND RESET INPUT CONNECTIONS


Contact inputs

Connect CP1 count input contact between terminals 11 and 12, CP2 count input contact between terminals 9 and 12, respectively. Use a high-reliability contact capable of making and breaking 2.5 mA at 12 VDC. Connect a resistor rated at 680 Ω, 1/2 W between each input terminal and terminal 8 to increase reliability.

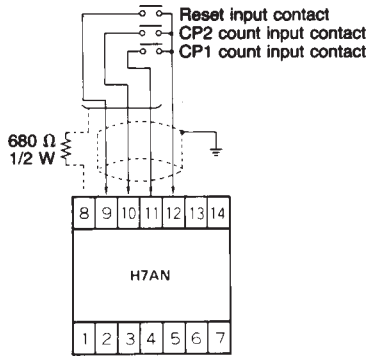

Solid-state inputs

Connect CP1 count input signal voltage between terminals 8 and 11, CP2 count input signal voltage between terminals 8 and 10, and a reset input signal voltage between terminals 8 and 9, respectively. Polarity of terminal 8 becomes (-) common.

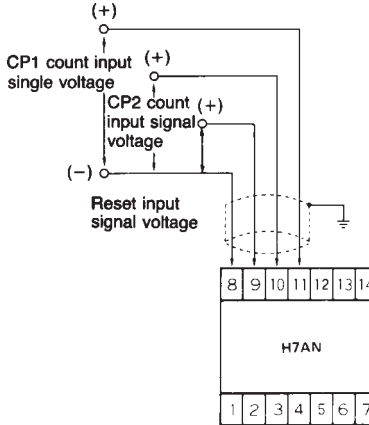

Never apply an input signal at a voltage of 30 V or more. Avoid applying a reverse voltage.


Signal voltage level of solid-state input

When an input signal is applied to the counter at supply voltage E (V) from the load resistance (output resistor R (kΩ) of the transistor Tr in the solid-state circuit, input signal voltage level V becomes high when transistor Tr turns OFF. This "H" level can be calculated by the following equation:

$$H \text{ level of } V = \frac{4.7 E}{4.7 + R} \text{ (V)}$$

Determine the value of R or E properly so that the result of the above equation stays within 5 to 30 V.

In the following diagram, the "L" level of input signal voltage V is governed by the saturation voltage between the collector and emitter of transistor Tr. Generally, the saturation voltage of semiconductor is 1 V or less and the "L" range of 0 to 2 V may be adequately satisfied.

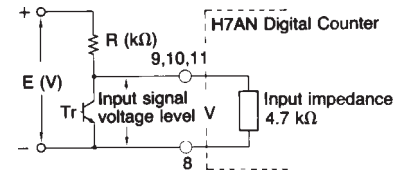


■ POWER SUPPLY CONNECTIONS

Connect the required supply voltage to terminals 1 and 2.


Full supply voltage must be applied all at once to the counter from switches or relays. Gradual application of supply voltage may cause non-power reset or memory change.

When applying a power-OFF reset, be sure to provide a reset signal time (power-OFF time) longer than 0.5 sec.

AC power supply

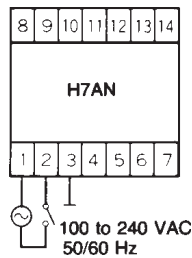


DC power supply

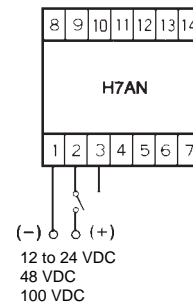


■ POWER SUPPLY FOR EXTERNALLY CONNECTED EQUIPMENT

H7AN counters have a built-in power supply for externally connected components such as sensors for count or reset input, or loads connected to the solid-state control output (12 VDC, 80 mA). Power can be applied to sensors and loads simultaneously.

Single preset counters

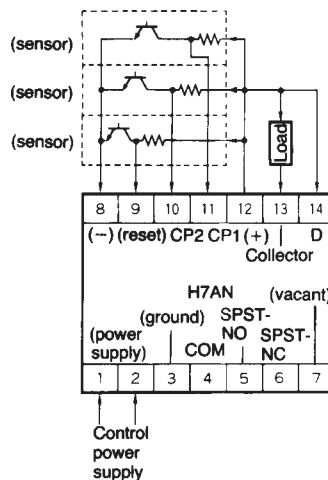

Double preset counters

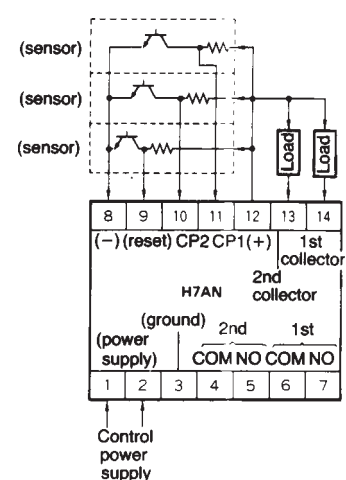


■ OUTPUT LOAD CONNECTIONS


Single preset counters

Terminals 4, 5, and 6 are for contact output while terminals 8 and 13 are for solid-state output. Terminal 14 is connected to absorb the surge if an inductive load is connected. The control outputs of both contact type and solid-state type are available simultaneously.

Contact output load

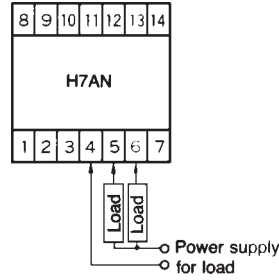


Solid-state output load

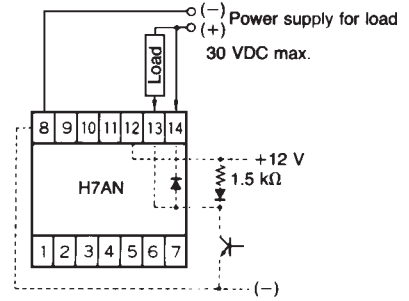


Double preset counter

Terminals 6 and 7 are for the first contact output and terminals 4 and 5 for the second contact output. Terminals 8 and 14 are for the first solid-state output and terminals 8 and 13 are for the second solid-state output. The control outputs of both contact type and solid-state type are available simultaneously.

Contact output load

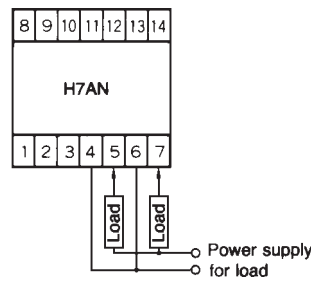


Solid-state output load

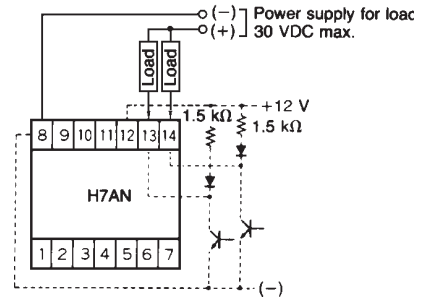


Operation

■ NOMENCLATURE


H7AN-2D, H7AN-2DM, H7AN-E2D, H7AN-E2DM

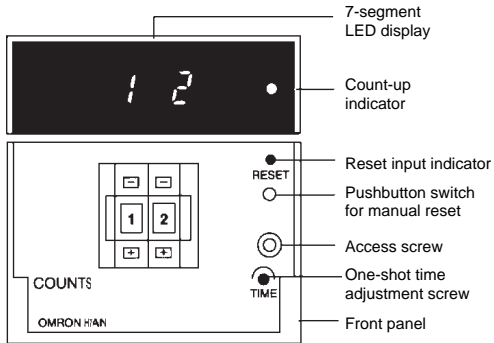


H7AN-4D, H7AN-4DM, H7AN-E4D, H7AN-E4DM

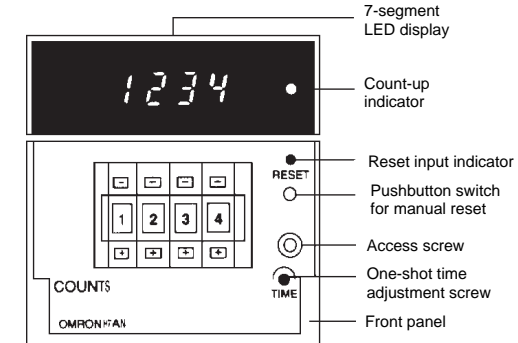


H7AN-W4D, H7AN-W4DM, H7AN-WE4D, H7AN-WE4DM

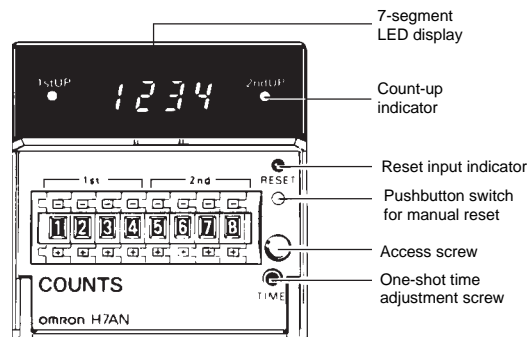


H7AN-R6D, H7AN-R6DM

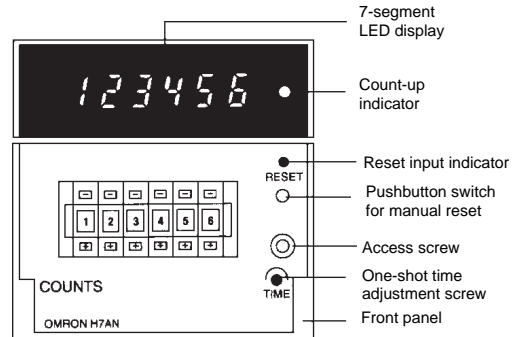


H7AN-RW6D, H7AN-RW6DM

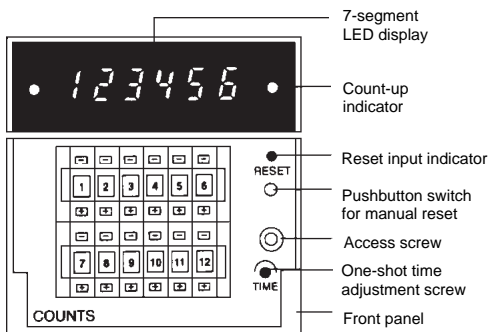


H7AN-R8D, H7AN-R8DM

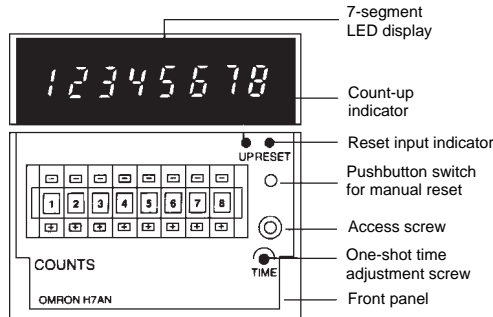


H7AN-T4, H7AN-T4M,
H7AN-ET4, H7AN-ET4M

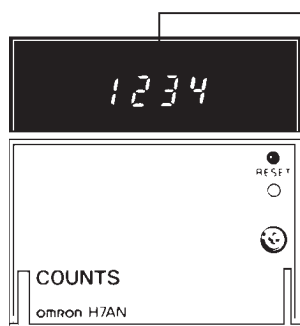

H7AN-RT6, H7AN-RT6M

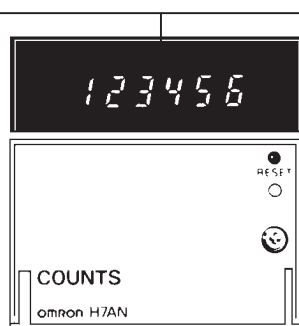


H7AN-RT8, H7AN-RT8M

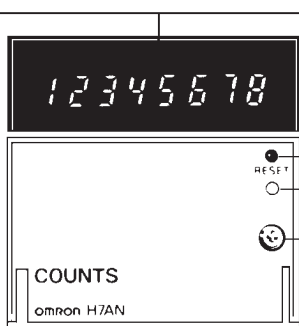


■ ACCESS TO DIP SWITCHES

The internal specification selector switches are used to program counting function, maximum counting speed, UP or DOWN display, manual reset function enable or disable, output level of the solid-state output when the count is up, and one-shot output/sustained output of the control output(s).

Open the front cover to expose the access screw on the lower right side.

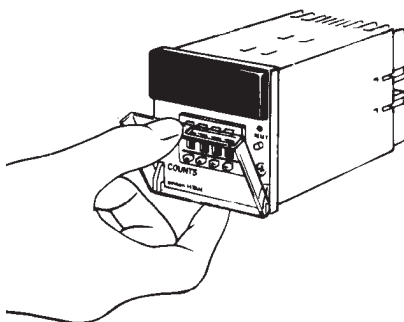

The internal unit can be drawn out by loosening the access screw. This allows the counter to have specifications changed without rewiring.

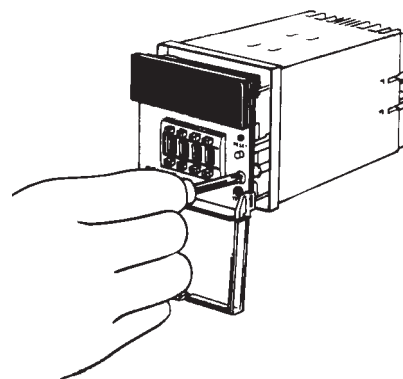


FUNCTION SELECTIONS MADE BY INTERNAL DIP SWITCHES

To program the function specifications, set the rotary DIP switches and slide switches mounted on the PC board located at the right side of the internal unit (when viewed from the front).

In the case of the "-M" type counters, with backup power supply function for memory protection, the new count value set by the thumbwheel switch or changes to the counting functions and operation modes

by the DIP switches become effective only when the counter is reset by external or manual reset, but not by automatic reset.

H7AN-2D, H7AN-2DM

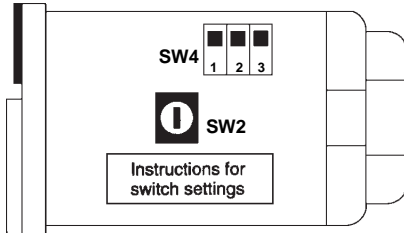

SW2 Output mode selector switch

Switch position	Operation mode
0	N
1	F
2	C
3	R
4	K
5	P
6	Q
7	N
8	N
9	F
A	C
B	R
C	K
D	P
E	Q
F	N

SW4-1 Solid-state output level selector switch

L→H (Output level changes from low to high when the count is up.)
 H→L (Output level changes from high to low when the count is up.)


SW4-2 Manual reset selector switch

Enable
 Disable

SW4-3 UP/DOWN selector switch

UP (addition) counting
 DOWN (subtraction) counting

H7AN-E2D, H7AN-E2DM

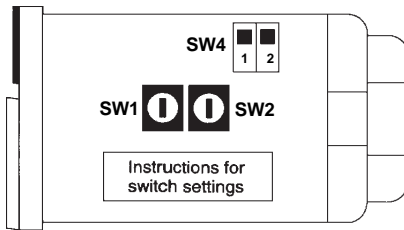

SW2 Output mode selector switch

Switch position	Operation mode
0	N
1	F
2	C
3	R
4	K
5	P
6	Q
7	N
8	N
9	F
A	C
B	R
C	K
D	P
E	Q
F	N

SW4-1 Solid-state output level selector switch

L→H (Output level changes from low to high when the count is up.)
 H→L (Output level changes from high to low when the count is up.)


SW4-2 Manual reset selector switch

Enable
 Disable


SW1 Count input function selector

Switch position	Input mode
0	A (command inputs L→H)
1	A (command inputs L→H)
2	B (individual inputs L→H)
3	C (quadrature inputs L→H)
4	D (command inputs H→L)
5	D (command inputs H→L)
6	E (individual inputs H→L)
7	F (quadrature inputs H→L)
8	A (command inputs L→H)
9	A (command inputs L→H)


H7AN-4D, H7AN-4DM

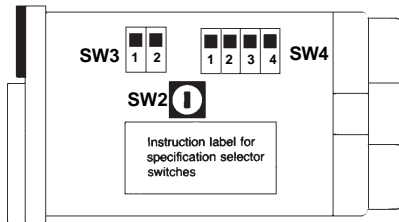


SW3-1 Count input 1 maximum counting speed selector switch




SW3-2 Count input 2 maximum counting speed selector switch




SW4-1 Solid-state output level selector switch

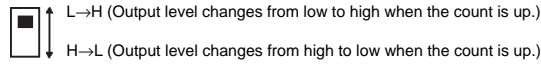

SW4-2 Manual reset selector switch




SW4-3 UP/DOWN selector switch

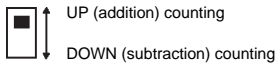

SW2 Output mode selector switch

Switch position	Operation mode
0	N
1	F
2	C
3	R
4	K
5	P
6	Q
7	N
8	N
9	F
A	C
B	R
C	K
D	P
E	Q
F	N


H7AN-E4D, H7AN-E4DM

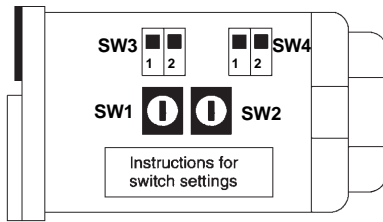


SW1 Count input function selector

Switch position	Input mode
0	A (command inputs L→H)
1	A (command inputs L→H)
2	B (individual inputs L→H)
3	C (quadrature inputs L→H)
4	D (command inputs H→L)
5	D (command inputs H→L)
6	E (individual inputs H→L)
7	F (quadrature inputs H→L)
8	A (command inputs L→H)
9	A (command inputs L→H)


SW3-1 Count input 1 maximum counting speed selector switch



SW3-2 Count input 2 maximum counting speed selector switch



SW4-1 Solid-state output level selector switch

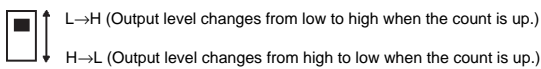


SW4-2 Manual reset selector switch



SW2 Output mode selector switch

Switch position	Operation mode
0	N
1	F
2	C
3	R
4	K
5	P
6	Q
7	N
8	N
9	F
A	C
B	R
C	K
D	P
E	Q
F	N

H7AN-W4D, H7AN-W4DM

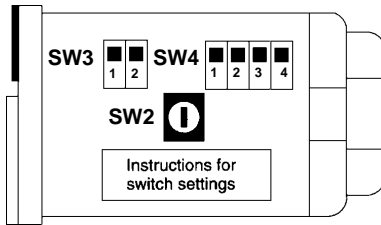

SW3-1 Count input 1 maximum counting speed selector switch

30 cps
 5,000 cps in output modes N, F, R, K, Q
 3,000 cps in output modes C and P or with quadrature (phase difference) input

SW3-2 Count input 2 maximum counting speed selector switch

30 cps
 5,000 cps in output modes N, F, R, K, Q
 3,000 cps in output modes C and P or with quadrature (phase difference) input

SW4-1 Solid-state output 1 level selector switch

L→H (Output level changes from low to high when the count is up.)
 H→L (Output level changes from high to low when the count is up.)

SW4-2 Solid-state output 2 level selector switch

L→H (Output level changes from low to high when the count is up.)
 H→L (Output level changes from high to low when the count is up.)

SW4-3 Manual reset selector switch

Enable
 Disable

SW4-4 UP/DOWN selector switch


UP (addition) counting
 DOWN (subtraction) counting

SW2 Output mode selector switch

Switch position	Operation mode
0	N
1	F
2	C
3	R
4	K
5	P
6	Q
7	N
8	N
9	F
A	C
B	R
C	K
D	P
E	Q
F	N

Note: In positions 0-7, Output 1 is a sustained output. In positions 8-F, Output 1 is a fixed 0.5 sec one-shot.

H7AN-WE4D, H7AN-WE4DM

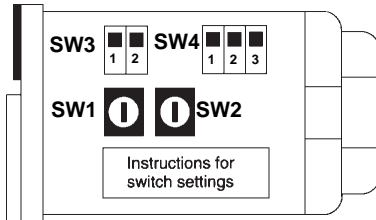

SW1 Count input function selector

Switch position	Input mode
0	A (command inputs L→H)
1	A (command inputs L→H)
2	B (individual inputs L→H)
3	C (quadrature inputs L→H)
4	D (command inputs H→L)
5	D (command inputs H→L)
6	E (individual inputs H→L)
7	F (quadrature inputs H→L)
8	A (command inputs L→H)
9	A (command inputs L→H)

SW3-1 Count input 1 maximum counting speed selector switch

30 cps
 5,000 cps in output modes N, F, R, K, Q
 3,000 cps in output modes C and P or with quadrature (phase difference) input

SW3-2 Count input 2 maximum counting speed selector switch

30 cps
 5,000 cps in output modes N, F, R, K, Q
 3,000 cps in output modes C and P or with quadrature (phase difference) input

SW4-1 Solid-state output 1 level selector switch

L→H (Output level changes from low to high when the count is up.)
 H→L (Output level changes from high to low when the count is up.)

SW4-2 Solid-state output 2 level selector switch

L→H (Output level changes from low to high when the count is up.)
 H→L (Output level changes from high to low when the count is up.)

SW4-3 Manual reset selector switch


Enable
 Disable

SW2 Output mode selector switch

Switch position	Operation mode
0	N
1	F
2	C
3	R
4	K
5	P
6	Q
7	N
8	N
9	F
A	C
B	R
C	K
D	P
E	Q
F	N

Note: In positions 0-7, Output 1 is a sustained output. In positions 8-F, Output 1 is a fixed 0.5 sec one-shot.


H7AN-R6D, H7AN-R6DM

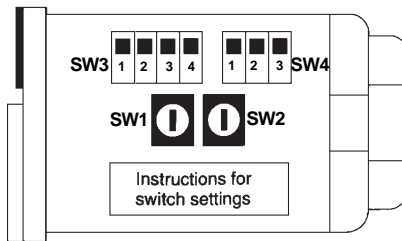


SW1 Count input function selector

Switch position	Input mode
0	A (command inputs L→H)
1	A (command inputs L→H)
2	B (individual inputs L→H)
3	C (quadrature inputs L→H)
4	D (command inputs H→L)
5	D (command inputs H→L)
6	E (individual inputs H→L)
7	F (quadrature inputs H→L)
8	A (command inputs L→H)
9	A (command inputs L→H)


SW3-1/SW3-2 Count input 1 maximum counting speed selector switch



SW3-3/SW3-4 Count input 2 maximum counting speed selector switch




Count Speed

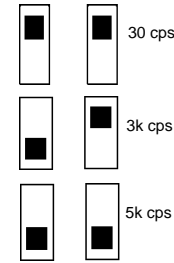


SW2 Output mode selector switch

Switch position	Operation mode
0	N
1	F
2	C
3	R
4	K
5	P
6	Q
7	N
8	N
9	F
A	C
B	R
C	K
D	P
E	Q
F	N


SW4-1 Solid-state output level selector switch

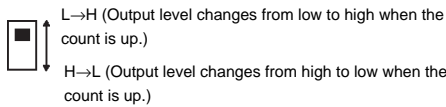


SW4-2 Set value read selector

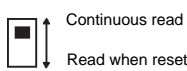

SW4-3 Manual reset selector switch



H7AN-RW6D, H7AN-RW6DM

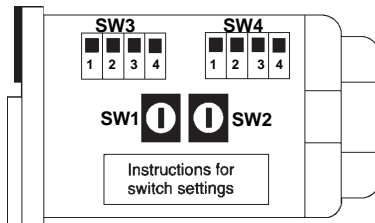

SW1 Count input function selector

Switch position	Input mode
0	A (command inputs L→H)
1	A (command inputs L→H)
2	B (individual inputs L→H)
3	C (quadrature inputs L→H)
4	D (command inputs H→L)
5	D (command inputs H→L)
6	E (individual inputs H→L)
7	F (quadrature inputs H→L)
8	A (command inputs L→H)
9	A (command inputs L→H)


SW3-1/SW3-2 Count input 1 maximum counting speed selector switch



SW3-3/SW3-4 Count input 2 maximum counting speed selector switch




Count Speed

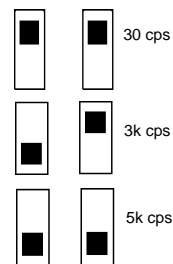


SW2 Output mode selector switch

Switch position	Operation mode
0	N
1	F
2	C
3	R
4	K
5	P
6	Q
7	N
8	N
9	F
A	C
B	R
C	K
D	P
E	Q
F	N


SW4-1 Solid-state output 1 level selector switch

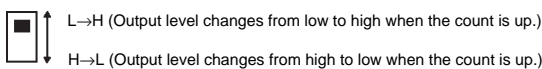

SW4-2 Solid-state output 2 level selector switch

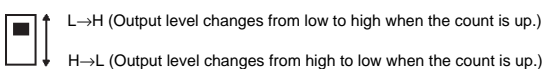

SW4-3 Set value read selector

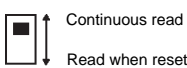


SW4-4 Manual reset selector switch



Note: In positions 0-7, Output 1 is a sustained output. In positions 8-F, Output 1 is a fixed 0.5 sec one-shot.


H7AN-R8D, H7AN-R8DM

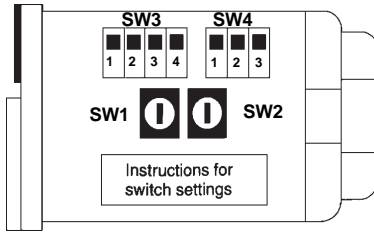


SW1 Count input function selector

Switch position	Input mode
0	A (command inputs L→H)
1	A (command inputs L→H)
2	B (individual inputs L→H)
3	C (quadrature inputs L→H)
4	D (command inputs H→L)
5	D (command inputs H→L)
6	E (individual inputs H→L)
7	F (quadrature inputs H→L)
8	A (command inputs L→H)
9	A (command inputs L→H)


SW3-1/SW3-2 Count input 1 maximum counting speed selector switch



SW3-3/SW3-4 Count input 2 maximum counting speed selector switch




Count Speed

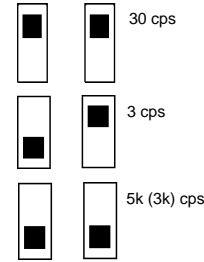


SW2 Output mode selector switch

Switch position	Operation mode
0	N
1	F
2	C
3	R
4	K
5	P
6	Q
7	N
8	N
9	F
A	C
B	R
C	K
D	P
E	Q
F	N


SW4-1 Solid-state output level selector switch

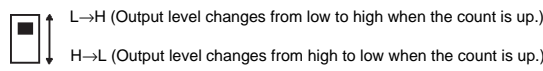


SW4-2 Set value read selector

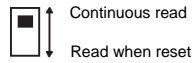


SW4-3 Manual reset selector switch




H7AN-T4, H7AN-T4M

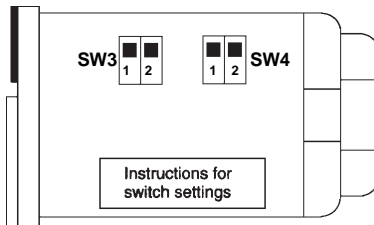


SW3-1 Count input 1 maximum counting speed selector switch




SW3-2 Count input 2 maximum counting speed selector switch

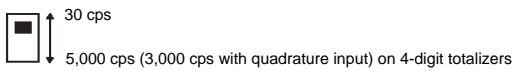


SW4-1 Manual reset selector switch



SW4-2 UP/DOWN selector switch

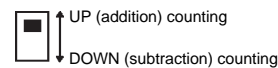


H7AN-ET4, H7AN-ET4M

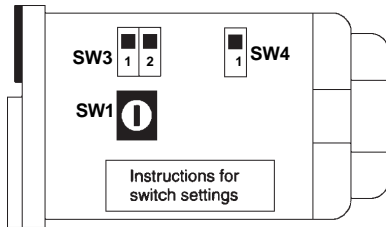


SW1 Count input function selector

Switch position	Input mode
0	A (command inputs L→H)
1	A (command inputs L→H)
2	B (individual inputs L→H)
3	C (quadrature inputs L→H)
4	D (command inputs H→L)
5	D (command inputs H→L)
6	E (individual inputs H→L)
7	F (quadrature inputs H→L)
8	A (command inputs L→H)
9	A (command inputs L→H)


SW3-1 Count input 1 maximum counting speed selector switch




SW3-2 Count input 2 maximum counting speed selector switch

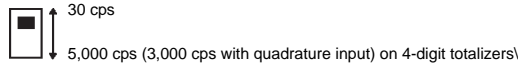

SW4 Manual reset selector switch




H7AN-RT6, H7AN-RT6M, H7AN-RT8, H7AN-RT8M

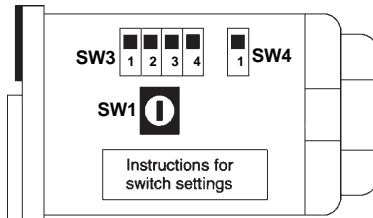


SW1 Count input function selector

Switch position	Input mode
0	A (command inputs L→H)
1	A (command inputs L→H)
2	B (individual inputs L→H)
3	C (quadrature inputs L→H)
4	D (command inputs H→L)
5	D (command inputs H→L)
6	E (individual inputs H→L)
7	F (quadrature inputs H→L)
8	A (command inputs L→H)
9	A (command inputs L→H)

SW3-1/SW3-2 Count input 1 maximum counting speed selector switch




SW3-3/SW3-4 Count input 2 maximum counting speed selector switch



SW4 Manual reset selector switch




Count Speed

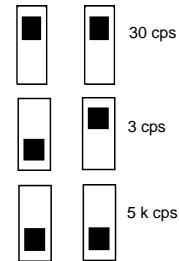

Installation

■ MOUNTING


The illustrations at right show how to mount the H7AN counter in a panel with the Y92H-5 mounting brackets supplied with each unit. Insert the counter through the panel. Loosen the screw on the bracket, then insert the bracket in the slot on the bottom of the counter. Tighten the screw until it makes a clicking sound. Repeat the process with the top bracket.

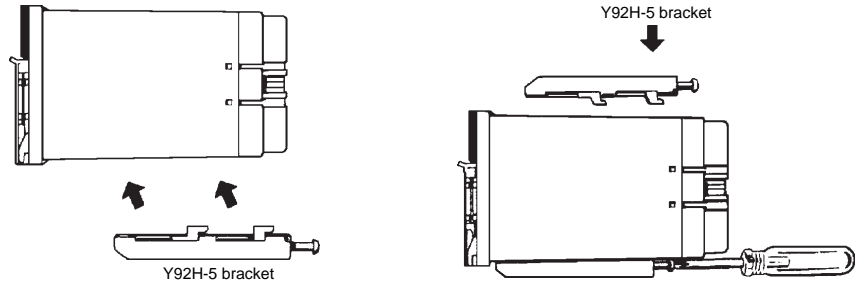

■ CAUTIONS REGARDING POWER SUPPLY, INPUT AND OUTPUT SIGNALS

Allow 50 ms after power application for the voltage rise time in the internal circuit. The counter may not operate in response to signals input during this period.

Counters with memory protection (-M types) may respond to input signals during 50 ms after the power is turned off (or after power failure) since this period is the voltage fall time in the internal circuit.

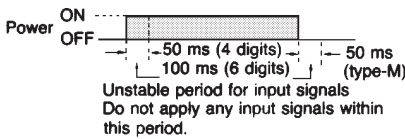

In the case of a momentary power failure, counters without backup power supply operate as follows depending upon the length of the power outage:

Power failure duration	Action when power is restored
0.5 sec or more	Counter is reset
0.01 sec or less	Status before power failure is retained
0.01 to 0.5 sec	Operation is unstable, either one is possible

■ RESET AND THE DISPLAY

While the reset signal (external or manual) is being applied, the digital display is extinguished in all digit positions and the reset LED indicator lights to show the reset input signal is being applied. When a reset is completed, the reset value is displayed on the digital display. Totalizing counters do not have a reset indicator.

In output operation modes C, K, P, and Q, operations that cause the set time to be up twice within the one-shot time are not recommended.

In output mode C, the internal counting circuit is reset at the same time as when the set count is up. For this reason, the up count value is not displayed.

Counters with memory back-up (-M type) do not have a power reset function, so care must be taken in the following situations:

When power is applied to the counter for the first time, the counter must be reset by applying external or manual input.

If the internal specifications are changed during a power failure, the counter must be reset externally or manually after the power is restored. Failure to apply the reset will cause the counter to operate with the previous settings. If the set value is changed during a power failure, the counter need not be reset after power recovery.

The back-up battery lasts about 10 years in normal use, but cannot be replaced.


■ SETTINGS

Do not reset thumbwheel switches while the counter is operating.


Do not set both presets of a double preset counter to the same value.

Do not allow the thumbwheel setting fall between numbers as the counter will ignore that digit and give a possible wrong count value.

When the count value is all zeroes, there will be a momentary control output upon power application. This can be used to check normal output.

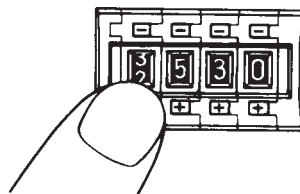

530
is how the counter will interpret this setting

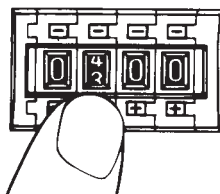

0000
causes a momentary output

■ TESTING

When conducting dielectric test, impulse voltage test, insulation resistance test, etc., between the electric circuit and the non-current-carrying metal parts with the counter mounted on the control board, remove the internal unit to isolate it from the counter circuit.

Removal of the internal unit is necessary to prevent it from being damaged by the test voltage flowing across the power supply terminals of the counter, if some of the components mounted on the control board have insufficient dielectric strength or insulation resistance.

NOTE: DIMENSIONS SHOWN ARE IN MILLIMETERS. To convert millimeters to inches, divide by 25.4.

OMRON

Omron Europe B.V. EMA-ISD, tel:+31 23 5681390, fax:+31 23 5681397, <http://www.eu.omron.com/ema>